


User manual

S-2TP

Trolley jack with mechanical locking system

Read and understand this manual before use. Never use a hydraulic jack as the sole means of support. After lifting, immediately support the vehicle with appropriately rated jack stands. The mechanical locking system does not replace jack stands.

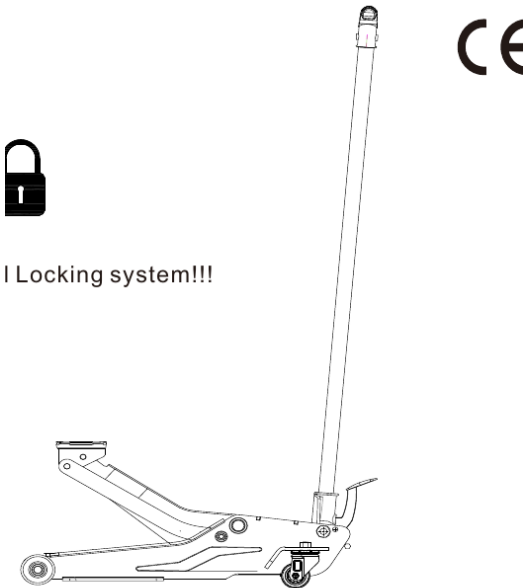

Technical specifications


Capacity	2 t
Minimum height	75 mm
Maximum height	500 mm

Model-specific English edition based on the supplied S-2TP manufacturer's manual.

Safety instructions


Only authorised persons who have carefully read and understood this manual may operate the jack. Do not modify the jack in any way. The manufacturer accepts no responsibility for improper use.

1. Use for lifting only, not for supporting the load. Support the vehicle with appropriately rated jack stands before working.
2. Never exceed the rated capacity.
3. Use only on hard, level ground. Use wheel chocks as appropriate.
4. Ensure that no persons are inside the vehicle before lifting.
5. Never work under a raised vehicle without first supporting it with jack stands.
6. Never place any part of your body under the vehicle during lifting or lowering.
7. Consult the vehicle manufacturer's manual for approved lifting points. Centre the saddle under the lifting point.
8. If operation is irregular, discontinue use until the jack has been professionally inspected and repaired.

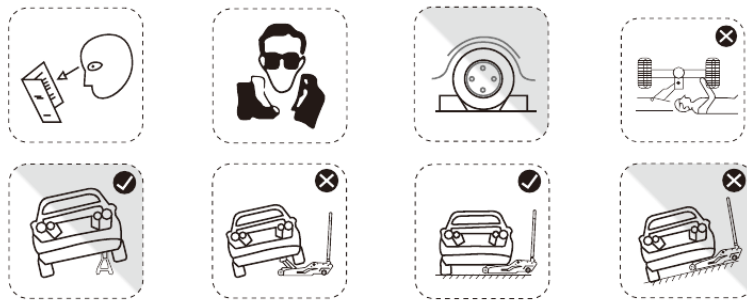


Assembly and lifting

1. Join the two handle sections with the supplied bolt and secure the T-shaped grip with the supplied screw.
2. Insert the handle into its socket. Tighten the socket bolt to prevent accidental removal during use.

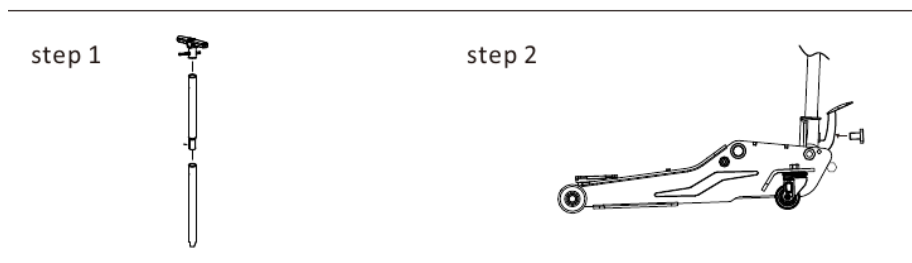


Lifting and bleeding

1. Before use, remove accumulated air: pull the grip upwards and turn it anticlockwise. Hold it in this position and pump several times to lubricate the internal parts and bleed air from the system.
2. Locate the vehicle's approved lifting point and centre the saddle beneath it.
3. The foot pedal allows faster approach to the load.
4. Pump through full handle strokes until the required height is reached.
5. Transfer the load to suitable, appropriately rated jack stands.

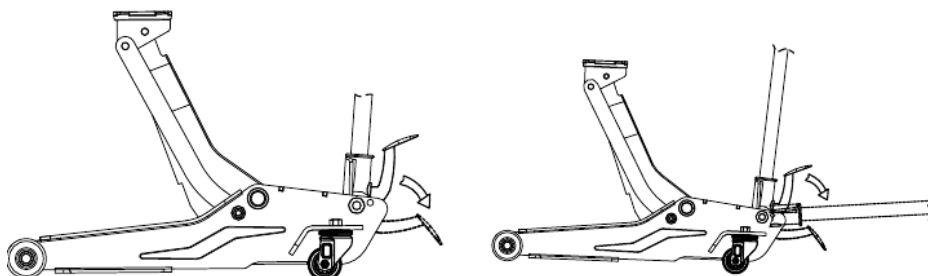

Lowering

1. Raise the vehicle to unload the jack stands, then remove them.
2. Above 295 mm, the mechanical lock engages. First lift by 2 mm to release it (step 1).
3. Release the locking lever with your foot and hold it. At the same time, pull the grip upwards and turn it anticlockwise. The grip returns automatically (hold-to-run/dead-man principle): hold it until the jack has fully returned to its initial position.

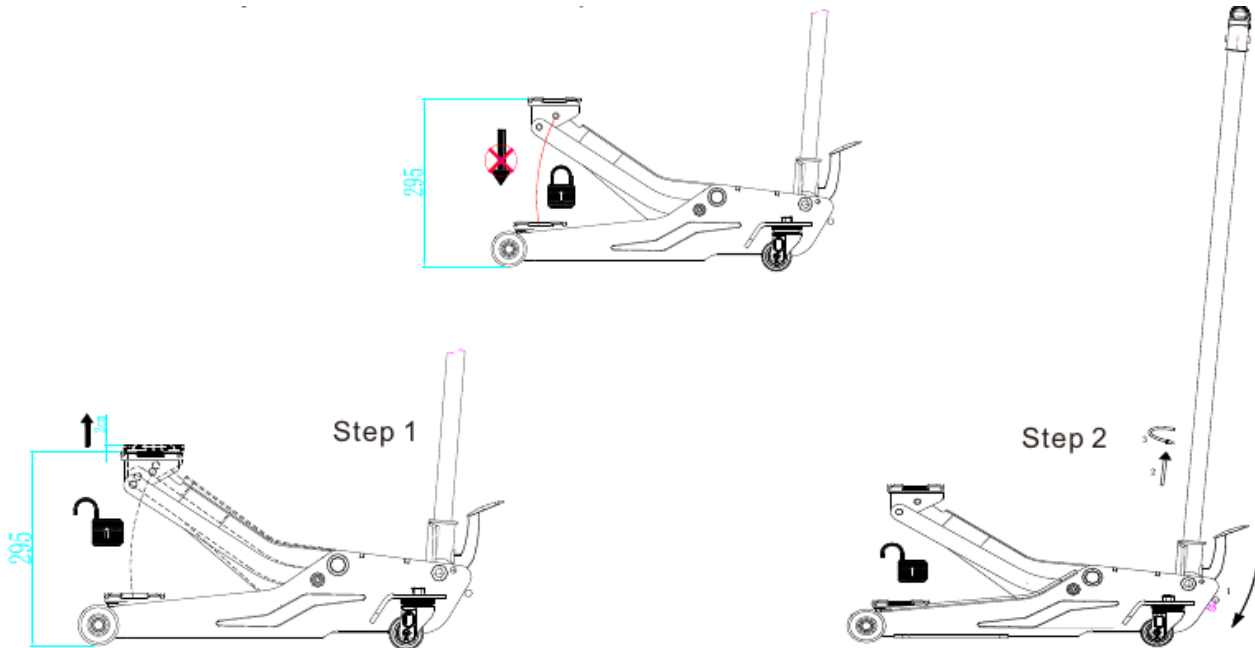


Step 1: lift by 2 mm. Step 2: release the lock and lower.

Read and understand this manual before use. Never use a hydraulic jack as the sole means of support. After lifting, immediately support the vehicle with appropriately rated jack stands. The mechanical locking system does not replace jack stands.

Maintenance

1. Maintenance and repairs may only be carried out by qualified professionals.
2. Use only original spare parts.
3. When not in use, store with the saddle fully lowered, in a clean, dry place out of children's reach.
4. To check or renew the oil, remove the filler plug and drain the oil into a container. Do not allow dirt to enter when adding new oil.
5. Too much oil prevents complete lowering; insufficient oil prevents reaching full lifting height.
6. Do not use brake fluid, turbine oil, transmission fluid, engine oil or glycerine. Incorrect fluid can cause premature failure and sudden loss of load. Premium hydraulic jack oil is recommended.

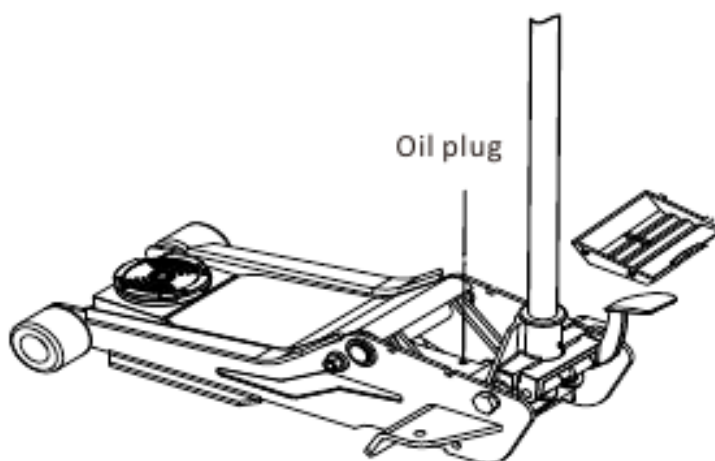

Oil plug: oil filler plug.